

HOW TO HANDLE BOBBINS

'TORAY'

Toray Carbon Fibers Europe

I. HANDLING BOBBINS

6 INCH BOBBINS (1)

Hold the 2 kg bobbin by the cardboard tube with one or two hands



10 INCH BOBBINS (2)

Hold the 4 kg (or more) bobbin by the cardboard tube and outside diameter



II. UNFILMING BOBBINS



Pull the thermo-retractable film along the welding (3)



Separate each side of the film (4)




Remove the film (5)

III. ADVICE

It is forbidden to handle carbon fiber bobbins using cutting tools (scissors, cutter) (6)

IV. STORAGE BEFORE USE

Before processing, it is recommended to leave the fiber (uncovered and / or filmed and packed) for about 12 hours to stabilize them to the production temperature conditions.

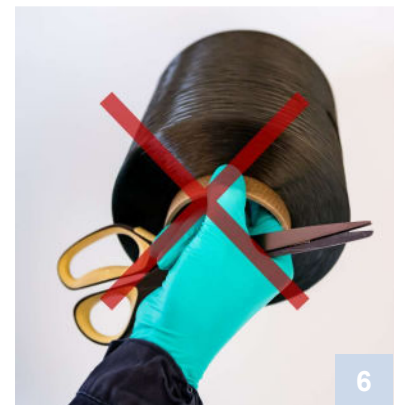

TORAY CARBON FIBERS EUROPE S.A.

SALES AND MARKETING DIVISION
18 – 20 Avenue de la Porte d'Italie
75013 PARIS, FRANCE

HEAD OFFICE
Route Départementale 817
64170 LACQ, FRANCE

PLANT
Route de Lagor
64150 ABIDOS, FRANCE